


ShockLog® Cellular GL Quick Start Guide

The ShockLog® Cellular GL Module may be used with any ShockLog 298 Impact Recorder with firmware revision 30 or

ShockLog Set Up

When a ShockLog Cellular Module is to be paired with a ShockLog 298, the user must select the Satellite / Cellular option on the Firmware Options page of the ShockLog setup software. This establishes the communication link between the recorder and the cellular module.

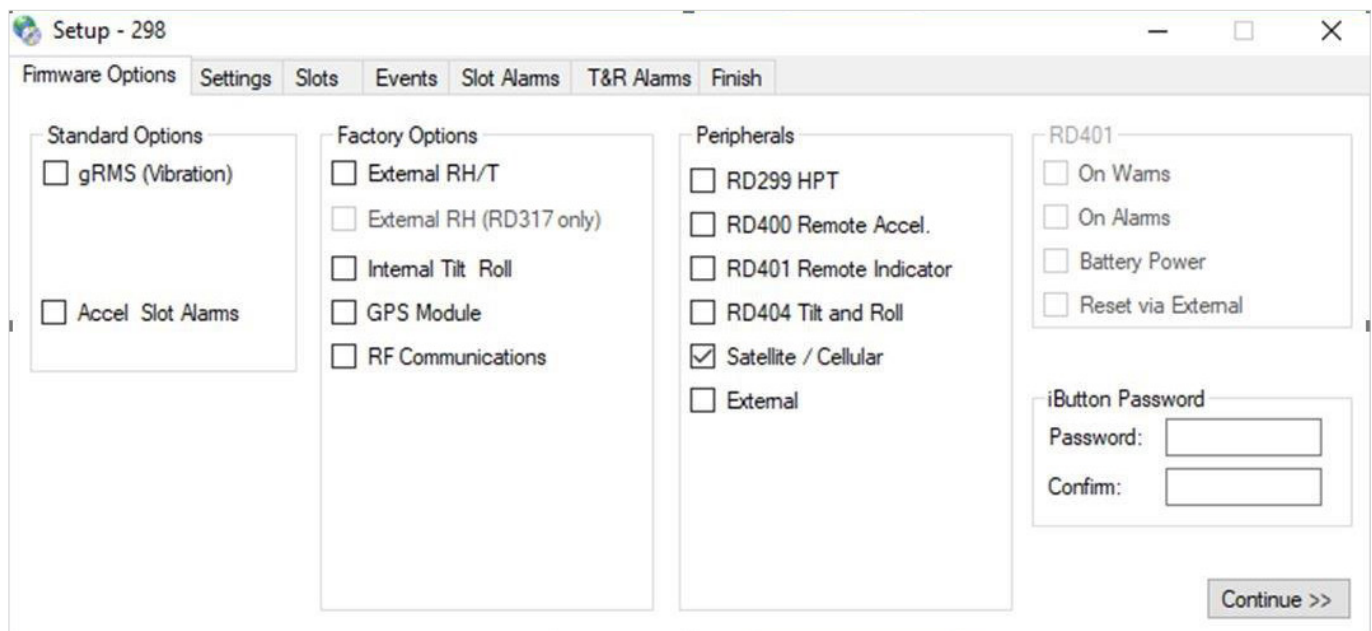

The screenshot displays the 'Setup - 298' window with the 'Firmware Options' tab selected. The window is divided into several sections for configuration:

- Standard Options:**
 - ☐ gRMS (Vibration)
 - ☐ Accel Slot Alarms
- Factory Options:**
 - ☐ External RH/T
 - ☐ External RH (RD317 only)
 - ☐ Internal Tilt Roll
 - ☐ GPS Module
 - ☐ RF Communications
- Peripherals:**
 - ☐ RD299 HPT
 - ☐ RD400 Remote Accel.
 - ☐ RD401 Remote Indicator
 - ☐ RD404 Tilt and Roll
 - ☒ Satellite / Cellular
 - ☐ External
- RD401:**
 - ☐ On Wams
 - ☐ On Alarms
 - ☐ Battery Power
 - ☐ Reset via External
- iButton Password:**
 - Password:
 - Confirm:

A 'Continue >>' button is located at the bottom right of the window.

ShockLog® Cellular GL Quick Start Guide


SpotSee Cloud

SpotSee Cloud allows the user to access shipment information anytime, anywhere. By logging into track.spotsee.io users can review journey information, alarm conditions, and asset locations.

Communication Module Activation and SpotSee Cloud

New User Set Up


New users will be prompted to set up a user name and password as well as to define some basic preferences

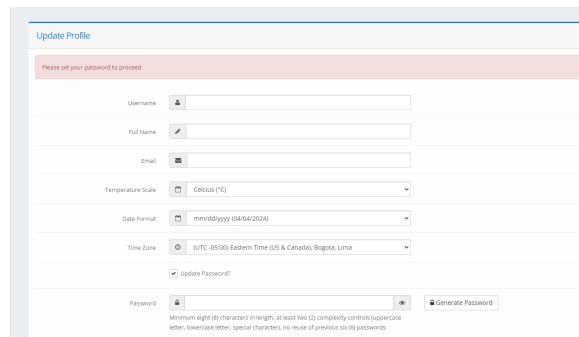

The 'Update Profile' form includes fields for Username, Full Name, and Email. It also features dropdown menus for Temperature Scale (Celsius/Fahrenheit), Date Format (mm/dd/yyyy, dd/mm/yyyy, yyyy/mm/dd), and Time Zone (UTC-05:00 Eastern Time (US & Canada), Bogota, Lima). A checkbox for 'Update Password?' is present, with a 'Generate Password' button and a password strength indicator below it. The password strength indicator specifies: 'Minimum eight (8) characters in length, at least two (2) complexity controls (uppercase letter, lowercase letter, special character, no reuse of previous six (6) passwords)'.

Returning User Sign On

After a username and password have been established, users can sign in by navigating to track.spotsee.io and signing in.

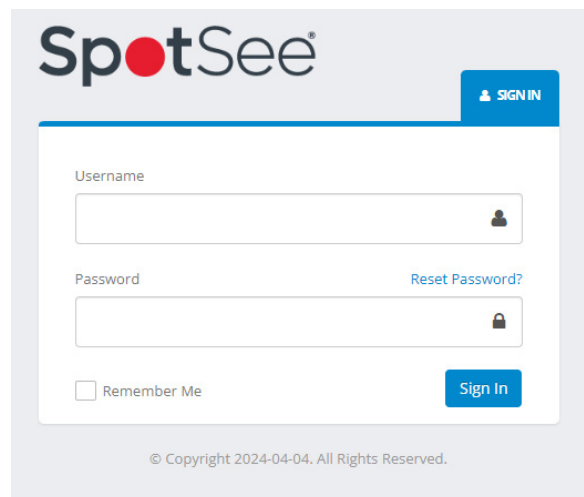


The login page features the SpotSee logo at the top left and a 'SIGN IN' button at the top right. The main form contains fields for Username and Password. A 'Reset Password?' link is located next to the Password field. Below the fields is a 'Remember Me' checkbox and a 'Sign In' button. At the bottom, a copyright notice reads: '© Copyright 2024-04-04. All Rights Reserved.'

ShockLog® Cellular GL Quick Start Guide

Dashboard

Upon signing in, users will access their Dashboard which provides an overview of the Locations, Assets, and Consignments (or Trips) belonging to that user. These items can be filtered by Asset Type and Status. It also enables search for a specific Asset.

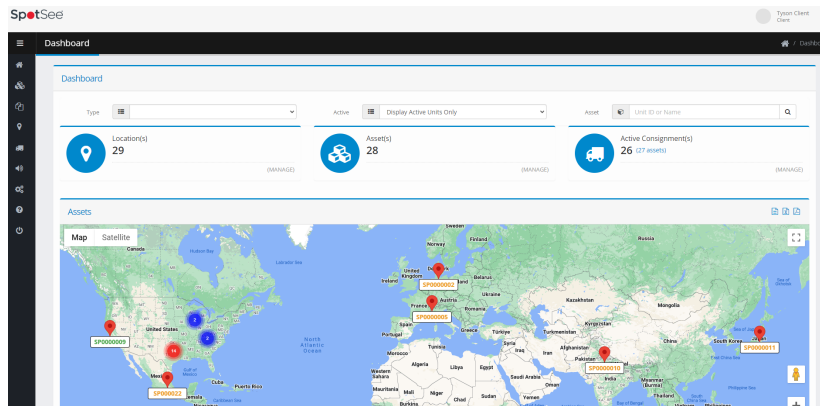

For Questions or Trouble Shooting, Please Contact Technical Support:

Email: techsupport@spotsee.io

SpotSee Canada & Americas:

US: +1 800-466-0101 | **Outside US:** +1 214-736-4579

SpotSee Europe, Middle East, Africa: +31.55.7370 148

SpotSee Asia-Pacific: +86 (21) 6627 6008